

ALCOR MYTH


6" E-INK E-BOOK READER



alcor

User's Manual of Electronic Book Reader

Precautions on using the device

1. This product is a sophisticated electronic device; please pay more attention to the usage:
 2. Keep the product away from electromagnetic environment please.
 3. When storing or carrying the product, please be careful not to press or squeeze the product.
 4. When storing or carrying the product, keep it away from damp environments. The product should not be subjected to dripping or splashing water.
 5. Do not clean the product with water or other chemical agents, clean the surface with soft cloth please.
 6. Please do not use excessive force to press keys of the e-book.
 7. Please do not put the e-book under sunshine directly. Keep it away from environments in high or low temperature.
 8. Please do not shake or strike the e-book severely, and avoiding accidents such as falling.
 9. In order to protect your hearing, do not adjust the volume too high (doctors point out that prolonged use of high volume will damage listener's hearing). When tinnitus occurs, please lower the volume or stop using.
 10. When the expansion card is inserted, please pay attention to the tips marked on the product, do not counter insert the card or plug it too vigorously, in case to damage the slot.
 11. In order to avoid heating, please do not connect the USB to PC for too long. Pull out it from USB interface while not use.
 12. Please do not use the product in environments such as heat, cold, dusty, wet and dry.
 13. When the E-book is being formatted or in the progress of uploading and downloading, please do not stop it, otherwise the documents will be damaged.
 14. subject to changes because of product performance and functionality without notice.
 15. When this machine is used as a portable hard disk, please store and export the file according to correct file management operation method; incorrect operation method may cause files missing, our company will not be responsible for this.
 16. Please make 'Disk Defragmenter' regularly. Connecting the e-book and PC with the USB cable attached, formatting the E-book with windows operating system after the PC matches it. (Formatting will clear away all the data inside E-book. So please make a backup before formatting.)
 17. Due to the difference of the capacity calculation, FAT partition table of the firmware and FLASH memorizer of the e-book take certain space. There will be certain differences between the memory capacity marked in machine and the one showed in PC. It depends on the firmware version of specific machine and its FLASH category. It is normal to meet with situation like this.
 18. There are so many viruses in current computers that may damage the documents and firmware programs easily. Please strengthen anti-virus. If the e-book has been infected and cannot be used, please upgrade firmware in a computer without virus, and to format disk.
 19. Our company will not make the responsibility for the documents missing which caused by damage, maintenance or other reasons like this.
 20. Please follow the manual to operate and make a backup for important data in common.
 21. Please do not use the product in electronics forbidden areas.
 22. Charging Precautions:
 - a) The product runs with reusable polymer lithium batteries. We advise you to charge for this product for full 8 hours for the first several times. It will extend the using life if you making recharge after using out the batteries.
 - b) Please keep on charging for half an hour more after filling the product which will support longer time playing.
 - c) The lithium battery is supposed to replace by customer service. It can only be replaced by the same kind of battery. Users can not replace by themselves own.
 - d) The using life of batteries will be different for different using situations or different production times.
 23. Two ways of charging:
 - e) To charge by USB interface on PC. It will be in charging once matching E-book with computer no matter the product is power on or off.
 - f) To charge via a compatible charger (adapter). It will start to charge after connecting the power line to electricity supply and matching the other side to the player adapter.
 - g) It is normal once you find the product is heating-up during the whole charging progress.
- Attention: power off and charge, connect the charger under power on, press  key about 5s, the machine will enter charging

condition automatically.

There will be some differences between manual and true function which caused by updated software. Please take the product you buy as final and binding, the guide is only for reference.

(The product is non-water-proof)

Our company keeps the right to improve the product on specification and design. We apologize for not give you notice once to make change.

Accessories

Electronic Book-----1 piece

USB cable-----1 piece

User manual-----1 piece

Warranty Card----- 1 piece

(Note: Enclosures subject to the actual items)

Features of Electronic Book reader

1. Protect your eyes: Supporting long-time reading! No flicking, scaling the words freely, without hurting your eyes. Just indulging and enjoy yourself inside the book world!
2. Be able to be seen in glare: based on e-ink electronic paper display technology, it is unreflective in the sunlight, you can enjoy your outdoor reading time freely.
3. No radiation: Safe. Avoid yourself from hurting by electronic products radiation. It will be your healthy reading partner.
4. Full views to read: High-definition, close to paper display. The angle of reading close to 180°.
5. Ultra-low power consumption: Adopt unique intelligent technology of power managing; it can be turned up and down continuously for more than 9,000 times.


Function Overview

1. Support a variety of text formats including TXT, PDF, EPUB, HTM/HTML, FB2, ZIP etc;
2. Adopt 6.0-inch E-INK electronic paper gives you comfortable and healthy reading feeling, there is no reflection.
4. Support expansion card.

(Note: As there are various storage cards with different capacity in the market, please pay attention to the test compatibility when buying the card. It has been verified that the e-book reader has the best compatibility with Class 4 TF card that the capability is more than 4GB)

3. Data transmission with USB 2.0

Product overview

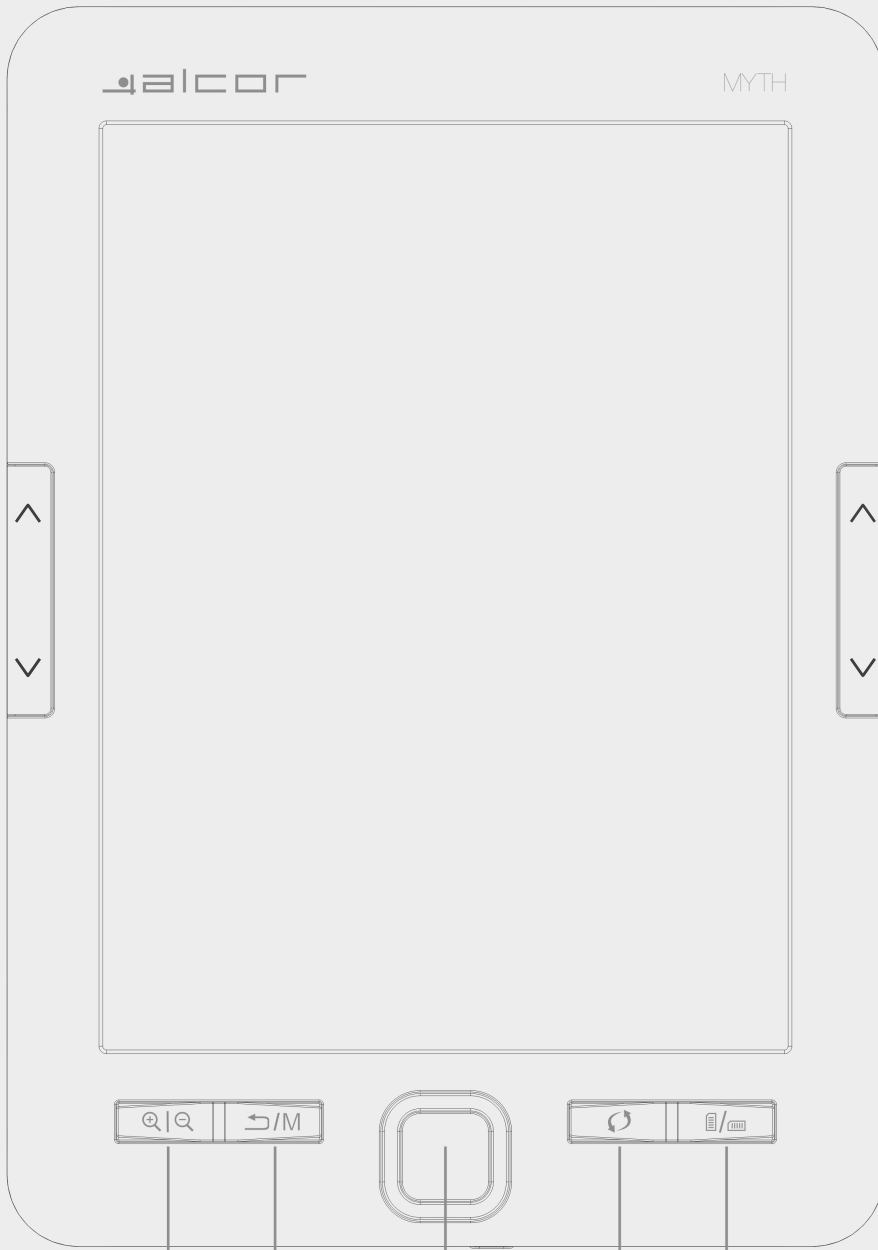

①

②

③

④

⑦

⑤

⑥



⑧

⑨

⑩

⑪

⑫

Definition of Keys:

- 1, Page turning
- 2, page turning
- 3, Reduce/Enlarge key: Reduce or enlarge the word during the reading;
- 4, back key: short press to back to last menu, long press back to main menu;
- 5, Refresh key: refresh the EPD during reading;
- 6, Rotate: change the direction of the display during reading;
- 7, OK button: back to the menu during reading;
- 8, TF card slot
- 9, Micro USB slot: for charging and copy files to device;
- 10, Power button: press this button about 5 seconds to turn on or off the product; lock and unlock while press shortly
- 11, RESET: When the machine does not respond for a long time, you can press the reset key to reset and then to restart;
- 12, LED indicator: During charging LED light, and change to green after battery is full.

Basic Operation

1. To Start up

Push the power switch to "🔌", last for 5 seconds or so, the system will start up automatically. It will enter the main interface.

Push the power switch to "🔌", last for 5 seconds or so, the system will shut down automatically.

2. Last file, next file

press left or right key to shift to last and next file while scan the picture.

3. To connect with computer and transfer files

Use USB cable to connect with a computer, so that the product can be used as a removable disk to transmit data. While the product is connecting with a computer through USB interface, it can be used as a U Disk. You can simply copy your favorite novels, music etc. to the product, and you do not need a third part to access.

4. Reset

When the machine does not respond for a long time, you can press the reset key to reset and then to restart.

Usage Instruction

After starting up and accessing to the main interface, showing as below:



Through the direction key, in the main menu interface, you can choose cycle in four function "are reading", "recently reading", "scan file ", "added test" and so on.

2. In the main menu interface, shortly press menu "button". you can choose cycle in eight function "scan picture", "setting system", and so on.

Reading

Select "Reading" mode in the main interface showing four books. Press "OK" key to access to the recently read list. Shortly press return key to exit recently read interface.

Recently read

Select "Recently Read" mode in the main interface showing four books. Press "OK" key to access to the recently read list. Shortly press return key to exit recently read interface.

Note: Only 10 recently read books can be choose.

Library

1) Access to the e-book case mode

Select the "E-book Case" mode in the main interface. Press "ok" key to access to the e-book case list

2) Select files and read

Press up and down key to select files, select one and press "ok" to access to e-book reading; short press return key to exit reading mode and return to e-book case list.

7.4. File reading

While reading you can make the following operations:



Идеальных планов не бывает, – в этом пришлось убедиться обычному московскому бизнесмену Степану Зайцеву.

Согласившись подменить реанувшего в самоволку брата-близнеца – сотрудника оперативного бюро пограничного дивизиона в загадочном Центруме, – он оказался вдруг в самом сердце чужого, враждебного, смертельно опасного мира. Мира, где спокойному и совсем не воинственному «деловому человеку» предстоит научиться притворяться и лгать, терпеть голод и боль, сражаться и убивать...

2014


Menu	1/2
Könyvjelző készítése	
Könyvjelzők	
Tartalomjegyzék	
Kedvencekhez ad	
Oldalszámra ugrás	
Keresés	
Fényerő	
Betűméret	
Betűtípus	

1. choosing add bookmark; to enter to add and remove the bookmark mode
2. Choosing bookmarks; to scan the bookmark list what you added.
3. Choosing table of contents; to scan the contents of e-book.
4. Choosing add to favorites, you can add and cancel the favorites
5. Choosing go to page to Input the page what you want to open, but page can not exceed the max page of the e-book.
6. Choosing search, you can input the content quickly to find books you want to browse,
7. Choosing font size, you can adjust the font size.
8. Choosing margin, to you can zoom the margin.
9. Choosing Rotate screen. to rotate the text direction.
10. The background black and white color:
Select the black background to enter the mode black background with the white letters to read; Select the white background to enter the mode white background with black letters to read.
11. Choosing automatic reading ,you can choose the different time ,the e-book will be enter automatic page model.
12. Choosing refresh model, you can refresh while reading different page.
13. Choosing text information. You can check related title and author information.

Image viewer

Access to image mode

Select “Image” mode in main interface by pressing the menu icon, and then press “ok” key to access to image file list; in the image mode by short press “ok” key to access to image file list; After accessing to image list, fast press ok key to select a file, popup the submenu to set image rotating, zoom in and out and scan the image in PowerPoint mode.

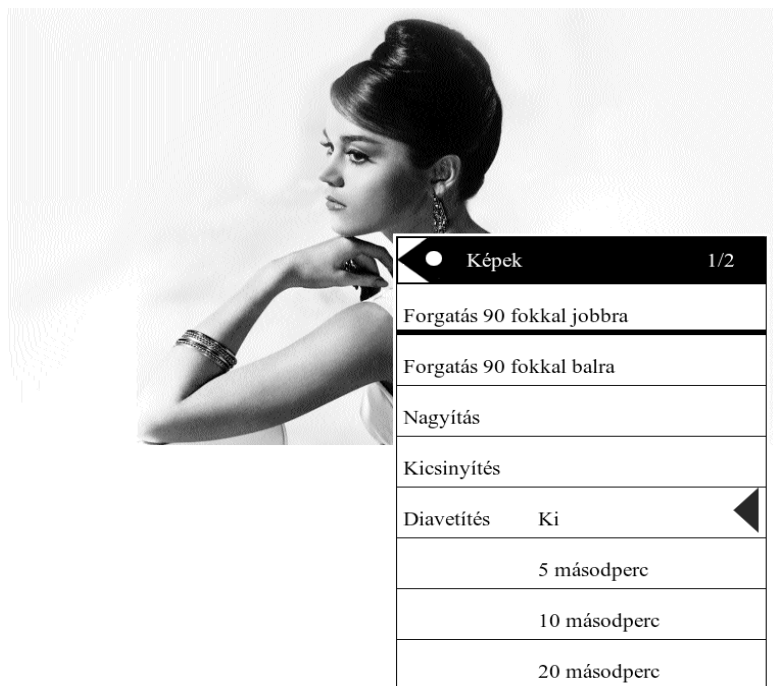

Calendar

Menu icon on the upper right corner of the main interface, press ok to enter process interface. Choosing clock calendar model, and then press ok to enter interface of scan calendar. Check the calendar by direction keys.

System Settings

1. Access to system setting mode.

Choose the mode of “System setting” on main interface, and then press “ok” key to access into the system setting list.

2. System setting list

There are seven options, including “update model, power set .setting the date and time .language settings, formate, default setting .facility information. ” options.

	Kijelzőfrissítés módja	<input checked="" type="radio"/>
	Energiagazdálkodás	<input type="radio"/>
	Dátum és idő	<input type="radio"/>
	Nyelv	<input type="radio"/>
	Eszköz formázása	<input type="radio"/>
	Gyári beállítások	<input type="radio"/>
	Eszköz információk	<input type="radio"/>
	Fényerő	<input type="radio"/>

1/1

10.1.refresh model: this supports setting the refresh, and there are options including refresh each page, 3page,5page,

10.2.power setting:including power off setting and auto sleep setting.you can set time of setting auto turn off and auto sleep according your habit.

10.3. Date/time setting: You can set the Year, Month, Day and Hour, Minute, Second by left and right key.



10.4. language setting function, there are language options of Simplified Chinese, English and Russia etc.


10.5. formatting local disk

10.6. Restore factory settings: use this option to restore factory setting state

10.7.Product information: display the software versioning, check the used and unused capacity of the flash, If there is a Micro SD, you can check the capacity of the TF card.

Explanation of the battery and power supply

11.1 When the machine is in charging state, the top right will show the charging icon , after full charged, the icon will switch to full power icon  automatically.

11.2When the battery is run out, it shows , the system will prompt low voltage. Please charge in time then.

11.3 When you charge for the product for the first time, in order to maximize the state of the battery, it is recommended to charge with power off and keep for more than 8 hours.

11.4 The new product should be full charged and full released for the first three times to activate; after that, it takes about 3-3.5 hours to fully charge the battery; it requires a longer charging time in running state.

11.5 It is recommended to fully charge and fully release the battery once every 3 months, to maintain the lithium battery.

11.6 After charging, please disconnect the USB cable, and remove the charger from the electric outlet. Please do not insert the charger into the electric outlet when the product is not connected.

11.7 If the machine is not in use for a long time, please fully charge the battery first, charge and release once every 3 months.

11.8 When the power is sufficient, please continue to use after charging; when the battery is completely dead, please use the charger to recharge the machine then connect to PC; please charge in the following situations:

A. While the battery icon shows out of battery.

B. The system shut down automatically, and shut down soon after starting up again.

C. No responding of operations to keys.

D. In order to ensure the stability of charging, it is recommended not to charge with USB of PC. Try to use the standard charger to recharge.

Troubleshooting

1. E-book cannot be turned on?

A: Connect USB or the charger, to check whether the battery voltage is too low. If so, please recharge a period of time before using.

If after charging the machine still cannot be turned on, please contact with our customer service.

2. Q: hear nothing by earphone?

A: Please check the volume is 0 or not.

3. Q: here are so much noisy.

A: Please check if the plug of earphone is clear or not, the stain on earphone may cause noise.

4. Q: Files cannot be downloaded?

A: Check if the PC and the player are connected correctly.

Check if the storage space is full.

Check if the USB cable is damaged.

5. Q: How to solve the system crash of the player?

A: If the crash occurs during operation, click the Reset button to restore.

In order to prevent crash, please pay attention not to operate too fast while pressing keys, it is recommended to operate one by one;

On the other hand, please charge in time when the battery power is insufficient.

6. Why the running time of reader varies?

Running time of polymer lithium battery may vary because of different temperature of environment and different using conditions.

When use the product, if the environment temperature is too high or too low, the running time of battery may be effected. It is recommended to use the product in normal temperature.

For the running condition, because of increase volume, frequent operations, frequent starting-up and shutting-down, the actual running time would vary in certain degree

Basic Specification

Category of Items	Items	Description
System and Interface	Interface	MicroUSB
	Multi-threading support	supported
Storage	Medium	Flash
	Capacity	4GB
	Storage Expansion	TF
	File System Supported	FAT16/FAT32
Screen	Size	E-INK 6-inch
	Screen Material	E-INK
	Operating Method	keys
Text Formats	TXT, HTM, HTML, FB2, EPUB, PDF, CHM, ZIP	
speaker	support	Built-in
picture	Support format	JPG, JPEG, BMPsupport24bite), GIF (Static)

	Resolution	4000*3000
Battery	Category	Lithium battery 1500mAh
	E-book Page Turning	9000 times
	Charging time	3-3.5hours
	Specification	5V—1A
Language	Language Supported	Russia, Simplified Chinese, English
Temperature to run	0℃ ~+40℃	

Music playing time note:

The music playing on this manual is under the below conditions:under the operation temperature,listening music by earphone/volume 15(Music bit rate 128kbps),based on different operation environment,the actual music playing time may have some difference from above data.

The above parameters for reference only!

alcOR

ALCOR MYTH

Forgalmazó / Distributor: Expert Zrt.
1044 Budapest, Óradna u. 12.
www.expert.hu, www.alcordigital.hu