

(1) (147)

151

Meet XL

En

129



Preface

Welcome to use the car/portable GPS navigator which does exact positions-fix and also do as multi-function device supporting photo browse, E-book reading and audio/video playing as well. It will bring you a colorful life with its greatly prepared navigation system and super entertainment functions.

Declaration

• The information hereof has been carefully checked to prevent mistakes before publication. But due to different comprehension or translation it all up to our

explanation and please contact with our customer service center for help.

- Please read this manual carefully before using. Use only the battery and the accessories the original factory provides, in order to avoid unanticipated damages, once use this system not following the instruction or connect the device with incompatible components, the damages might even threaten your personal safety and should not be covered by our warranty for which the company hereof holds no liability.
- Specifications are subject to change without prior notice. We reserve the right of final interpretation of this user manual.
- All pictures hereof are for your reference only, please subject to the real product.

Remarks

- Do not place the device under direct sun irradiation, in sharp-change temperature (below 0°C or above 60°C) environment or in high pressure, dusty or humid environment.
- Avoid dropping or impacting.
- Keep away from caustic liquid or electromagnetic radiation.

[NOTE] Please put the device with your luggage for X-ray detection at the airport. Do not directly use magnetic detector on the device or else will destroy the system.

• Clean with dry and soft cloth gently at power-off condition.

- Please fully charge and discharge the battery 2~3 times while first use to assure longer battery life.
- Do not put the device into fire
- Any unauthorized disassembly of the device will terminate official warranty.
- Please check the space left on SD card before saving new files or data and backup important files or data as those may be destroyed or lost due to improper use or other unexpected reasons.

Catalog

Preface		2
Remarks		4
1	Introduction	8
1.1	Features	8
1.2	Package	. 10
2	Usage on the Computer	. 13
3	Basic Operation	. 15
3.1	Battery	. 15
3.2	Power Button	. 16
3.3	Restart	. 17
3.4	Use in the car	. 18
3.5	Touch Pen	. 19

3.6	SD/MMC Card	
4	Main Functions	
4.1	Navigation	
4.2	Music	
4.3	Video	
4.4	Ebook	
4.5	Photo	
4.6	System	
4.6.1	Volume	
4.6.2	Power	
4.6.3	Backlight	
4.6.4	Date time	
4.6.5	Language	
4.6.6	Sys Info	

5	Specifications	38
6	FAQ	39

1 Introduction

Thanks for using this device. It is a car/portable GPS navigator combines with other functions which will be detailed explained in this manual. Please carefully read it before using and this manual is applicable for this device only.

1.1 Features

• Support GPS navigation


- Support WMV/AVI/ASF format video file
- Support MP3/WMA format audio file
- FM transmitter: can transmit about 10 meter in a tract of land(with external headphone antenna). Transmit frequency from 76Mhz to 108Mhz.
- Lyric (LRC) display synchronously
- Support JPG/BMP format picture browse
- Support TXT format eBook reading
- Support SD/MMC Card
- Built-in speaker
- Mini USB port


1.2 Package

Please check if you have all below items. Any miss please contact with the local agent or distributor.

- Car/Portable navigator
- AC adapter
- Car adapter
- User manual
- USB cable
- Holder
- Touch Pen
- 1.3 Illustration



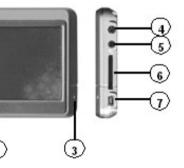

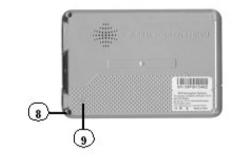

- 1. Power button Start up / shut down
- 2. LCD screen
- 3. LED Display charging state
- 4, External TMC antenna port (optional) connect to TMC antenna
- 5, Earphone Jack Connect to stereo Earphone
- 6, SD/MMC Card slot Insert the SD/MMC Card into it
- 7, USB port Connect to PC through MINI USB cable/charging device by power adapte.
- 8, Rope race Used to hang the touch pen on it.
- 9, Reset hole Reboot the system

2 Usage on the Computer

- 2.1 Link the device with the computer through USB cable connection to do data transferring between the device and PC.
- Make sure the power-on condition of the device.
- Mini USB port to the device and standard USB port to the PC USB host.

Data transferring

- Connect the device with the computer through USB cable.
- Double click 'My Computer' icon then find two 'Removable Disk'. The first one represents the device, and another represents SD/MMC card.
- Double click any one of the 'Removable Disk' to enter the folder then you can do copy, delete or edit data.

[NOTE] Please do not pull out the USB cable while doing data transferring or

else the data will be lost.

2.2 Disconnection

Please do according to the system notice to remove the USB cable.

- Left click USB icon on the taskbar then click the pop-up notice
- After seeing the safety notice remove the USB cable.

[NOTE] While connecting with the computer other functions of the GPS device will pause.

3 Basic Operation

3.1 Battery

Please fully charge while the first time use. The GPS device has built-in Lithium battery. And you can use the AC adapter or car adapter provided in the package to charge at home or on car.

[NOTE] The LED indicator will be red alight while charging and it will turn green after completely charging.

 AC adapter – DC port is for the power jack of the device and the other side is for electrical outlet. Car adapter – DC port is for the power jack of the device and the other side is for the cigar-lighter on the car.

[NOTE] Please use the car adapter after cranking up or else the current will destroy the GPS device.

3.2 Power Button

To enter the sleeping mode to save the power, please press the power button for 1 seconds and there is a message "entering sleeping mode" displayed, then screen would be shut off, but the red light is on.

To start up the system, please press the power button again, the screen will display the last picture showed before sleep automatically in the time of starting up.

To shut down the system, please press the power button for 2 seconds and there is a message "power off" displayed, then screen would be shut off

[NOTE] The device can be normally charged while powered off, and please keep power-off if no use for a long time.

3.3 Restart

If no response to any operation please try to restart the device through pushing On/off button

[NOTE] This operation may cause data loss so please backup significant files or data in advance.

3.4 Use in the car

While use the GPS device in your car, please use the Window mounting kit and fixing clip provided in the package to set the device on panel under the windshield.

[NOTE] Please carefully choose the GPS device setting position.

- Do not disturb the eye sight of the driver.
- Make sure well fixing.
- Keep away from SRS airbag place

3.5 Touch Pen

Please keep it carefully.

- Point to point choosing target icon
- Pen point dragging on the screen to target area or direction

3.6 SD/MMC Card

The SD/MMC card use on the device saved map software and data, and it can also be used as mass storage to keep files. Just inserting it to the card slot on the device. But while file reading, please do not take out the card.

[NOTE] Please keep the card away from corrosive, overhigh or low temperature

and direct sunlight. And inserting the card from right direction.

4 Main Functions

There are 6 menus in main menu: Navigation. Music, Video. E-book, Photo, System.



4.1 Navigation

 The intelligent navigation system used on the device does exact positions–fix through internal high sensitivity receiver, An optimal path would be figured out automatically and will help the user to reach the destination safely within shortest time.

- The routes recommended are for reference and it all up to your choice to do according to that or not.
- About signal receiving some factors may affect the signal receiving, such as weather, tall or dense buildings (in tunnel, underground parking and viaduct) and no satellite signal.

4.2 Music

Click "music" icon in main menu to open the audio folder.



- 1 : Exit and back to previous menu
- 2 : Previous page
- 3 : Next page
- 4 : Previous folder

Double click one music file to enter its operation interface.



- 1 : Exit and back to previous menu
- 2 : Exit and back to file list interface

- 3 : Previous file
- 4 : Next file
- 5 : Play/Pause
- 6 : Stop
- 7: Rate of process
- 8 : Volume
- 4.3 Video

Click "video" icon in main menu to open the video folder.



- 1 : Exit and back to previous menu
- 2 : Previous page
- 3 : Next page
- 4 : Previous folder

Double click one file to enter its operation interface.



1 : Exit and back to previous menu

- 2 : Play/Pause
- 3 : Stop
- 4 : Fast Play
- 5 : Previous folder
- 6 : Rate of process
- 7 : Volume

4.4 Ebook

Please click the 'Ebook' icon in main menu to open the file folder



- 1 : Exit and back to previous menu
- 2 : Previous page
- 3 : Next page
- 4 : Previous folder

Double click one file to enter its operation interface



- 1 : Exit and back to previous menu
- 2 : Previous page
- 3 : Next page
- 4 : Previous folder
- 5 : Other Page

Click the 'Other Page' icon to enter other page interface



1 : Exit and back to previous menu

- 2 : Keyboard
- 3 : Input area
- 4 : Clean
- 5 : Go to that Page
- 6 : Backspace

4.5 Photo

Please lick "photo" icon in main menu to open the file folder



- 1 : Exit and back to previous menu
- 2 : Previous page
- 3 : Next page
- 4 : Previous folder
- 5 : Play the chosen file or go to next page

Double click one file to enter its operation interface



1 : Exit and back to previous menu

- 2 : Previous picture
- 3 : Next picture
- 4 : Full screen autobrowse
- 5 : Zoom out
- 6 : Zoom in
- 7 : 90° rotate
- 8 : Previous folder

4.6 System

Please click "system" icon in main menu to enter system setting interface



4.6.1 Volume and FM transmitter

Click "volume" icon to enter its setting interface



- Click '+' or '-' icon to increase or decrease the speaker volume
- Choose to open or close sounds for taps
- Choose to turn on or turn off FM transmitter

• Click 'S' or ', to adjust the FM frequency to be the same as the FM frequency in your car. The voice on GPS device will be transferred to the car speaker.

4.6.2 Power

Click "power" icon to enter its setting interface

- The level bar shows current battery power
- Click '→' or '←' icon to set the auto power off time



4.6.3 Backlight

Click "backlight" icon to enter its setting interface


 Click '+' or '-' icon to set brightness level



• Click ' \rightarrow 'or ' \leftarrow 'icon to set the auto light off time

4.6.4 Date time

Click "date time" icon to enter its setting

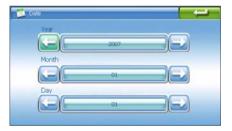

interface

- Click each icon on the screen to do setting
- Click ' \rightarrow ' or ' \leftarrow ' icon to set the time, date and time zone

4.6.5 Language

Click "language" icon to enter its setting interface, then click ' \rightarrow ' or ' \leftarrow ' icon to choose a language.



4.6.6 Sys Info.

Click "sys info." icon to enter its interface showing detailed system information.

 Click 'Calibration' button to center screen calibration interface. Pen touch

Db: 20 19 16 No. 69 41 10 4 5 6 7 8 9 3 11 12 Lon: Lat: sat: sat: Processor: SRFAtas-III Patform: 0.13
RAM Total: 64M Bytes Version: WINCE5.0 919891.0010.0000.0000 Serial: 7fded990f1a66b7c0b14001400000000

the cross cursor at the center it would move according to following path: center-left top-left bottom-right bottom-right top-center. Then do as the system prompt on the screen to exit and return to the system setting interface.

5 Specifications

OS System	Microsoft Window CE Net 5.0 Core
CPU	Centrality Atlas III 372MHZ
Memory	64MB SDRAM& 64MB Flash ROM
Sensitivity	<15m
Antenna	0.1m/sec
Audio	WMA/MP3
Video	WMV/AVI/ASF
Photo	JPG/BMP
Ebook file	ТХТ
SD/MMC Card	Support Up to 2GB

Screen

4.3inch TFT touch panel with 480*272pixel

6 FAQ

Response	Reasons	Solvent
Failed to insert the	Insert the wrong side	Change to the right
SD/MMC card		side
Indicator light off	The charger is broken	Contact with after
while power off		service center or local
charging		distributor
No system	The system problem	Restart the device
response at		

power-on status		
Suddenly exit the	1.wer saving/sleep status;	1.Press Sleep button to
system operation	2. power	restart the system;
interface		2. charging
No GPS signal	The environment condition	Move the GPS device
	affects the signal	to make improvement
	receiving	
Can not do		Wait a few minutes and
positioning	It needs time for signal	check if you are at the
	receiving	invalid receiving place,
		such as at home.



Distributor: Infopatika Ltd. Angol str. 38. H-1149 Budapest, Hungary www.infopatika.hu Made in China