

Infopatika

alcord



Distributor: Infopatika Ltd.
Angol str. 38. H-1149 Budapest, Hungary
www.infopatika.hu
Made in China
www.alcordingigital.com

Zed

User Manual

ALCOR ZED MP4 PLAYER USER'S MANUAL

Cautions

- Do not subject the device to severe impact or drop it from high position.
- Do not use the player in extreme hot or cold, dusty or dampy field. Do not expose it to direct sunlight.
- Back up the data frequently in case of accident data loss.
- Avoid using the player in strong magnetic field.
- Keep the device away from water or other liquids. In the event that water or other liquids enter the device, power off the product immediately, and clean the device.
- Do not use chemical solution to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- We are not responsible for the damages or lost data caused by malfunction, misusing, repairing the device or battery replacement.
- We do not attempt to disassemble, repair or modify the product. This will invalidate guarantee.
- The design of the player or actual display may be different from what is shown in this manual. It should be subject to the actual display or design.

Key Features

- Music Player
- Video player
- Image viewer
- Memory card reader
- Folder Navigation
- Video Recorder
- FM Radio (for EM718S)
- FM Encoding (for EM718S)
- Removable Storage Device
- Timing genre
- Built-in rechargeable lithium-ion battery
- Customized settings

Before Using

Connect to a PC and download audio files

This player is plug & play for WIN2000 or above OS. But for Windows98/SE, you are required to install a driver before connection.

- Plug the larger end of the USB cable to the USB port of the PC, and plug the smaller end to the USB port of the player.
- When the "CD" icon appear at the right bottom of the PC screen, double click "My Computer" on the desktop, you see a removable disk which indicates the player. Just use the removable disk as a regular hard disk, copying files from it to it.

Note: The transfer rate displayed on the PC may be different depending on the operating system. Exact transfer rate should be subject to the player's indication.

Removing the player from the PC safely

- For Windows XP:
 - Left click the "CD" icon at the right hand corner of the taskbar.
 - Click the pop-up mini-window with message of "Stop the USB Mass Storage Device - Drive (X)".
 - When you are prompted to remove the device, just click the player.
- For Win98, please make sure the data transfer is completed before unplugging the player.

Note: We now recommend to disconnect the player from PC properly in order to avoid data loss.

Charge the battery

The device has a built-in lithium-ion rechargeable battery. It is charged via USB connection. You are required to charge it when you use it for the first time. It takes about 3 hours to fully charge the battery. To charge the battery, connect the larger end of the USB cable to the USB interface of PC, and connect the other smaller end of the USB cable to the USB interface of this player. The device is connected to PC by charging cable. If you want to know the charge progress, disconnect the device safety by clicking the "CD" icon. You see an animating battery icon indicating charge progress. When the icon becomes green, the battery is fully charged.

Please charge the battery immediately when the display indicates low battery, or the device will be powered of automatically.

Note: For maximum performance, lithium-ion batteries need to be used often. If you don't use the device often, be sure to recharge the battery at least once per month.

Using memory card

- The device comes with a memory card slot for storing data from a micro-SD card. To use a memory card.
 - Insert a Micro-SD card to the card slot on the unit body.
 - Enter the later navigation mode to see two folders named "Flash Memory" and "Micro SD card". To play the audio/video files stored on the memory card, open the "Micro SD card" folder.

Note: The device does not guarantee compatibility with all memory cards from various manufacturers.

Key Description



ON/OFF: Turn on or off the power
LCD display: LCD display
Stop: Press to confirm selection. Press and hold to enter the main menu.
VOL+ : Increase the volume
NEXT: Play the next track
VOL- : Decrease the volume

PLAY/PAUSE: Briefly press to play or pause. Press and hold to enter the main menu.
PREVIOUS: Play the previous track
EXPANSE: Exit
Micro-SD card slot
USB Port

Power On/Off

- To power on,
 - Turn on the **ON/OFF** button.
 - Press and hold the **PLAY/PAUSE** key until you see prompt on the display.To power off,
 - Press and hold the **PLAY/PAUSE** key until you see prompt on the display.
 - Turn off the **ON/OFF** button. (Be sure to complete this step in order to select the battery life.)Note: This player has a power-saving feature which enables the device to power off automatically if it is idle for about 3 minutes.

Basic operation

Function	Operation
Play/Pause	Press the PLAY/PAUSE button to play or pause.
Adjust Volume	Press the VOL+ /VOL- button to increase or decrease the volume.
Move to the previous track	Press the PREVIOUS button.
Move to the next track	Press the NEXT button.
Fast Forward	Press and hold the NEXT button.
Repeat	Press and hold the PREVIOUS button.
A-B Repeat	To repeat a specified section of a track, <ol style="list-style-type: none">During playing, press and hold the VOL+ button to select the start point.Press and hold the VOL- button to select the end point.Press and hold the VOL+ button to stop the section repeat.
Lock /unlock buttons	Hold down the MENU and VOL- button together until you see indication on the screen.

Playing music

- Turn on the player to see the main menu. (Note: Pressing and holding the **MENU** button at any time can send you to the main menu.)
- Use the **PREVIOUS/NEXT** button to select "Music" on the menu and then press the **MENU** button to confirm selection. The music should play immediately. See "Basic Operation" for detail instructions.
- During music playing, you can briefly press the **MENU** button to enter the folder browser. In the folder browser mode, press the **VOL+ /VOL-** button to select a folder or track, and press the **MENU** button to confirm selection or press the **PLAY/PAUSE** button to return to the previous hierarchy.

Playing videos

- Press and hold the **MENU** button to display the main menu.
- Use the **PREVIOUS/NEXT** button to select "Video", and press the **MENU** button to enter the video player mode.
- Press the **VOL+ /VOL-** button to search a video or a folder that contains video files, and press the **MENU** button to confirm or press the **PLAY/PAUSE** button to return. For detail information about the player, see the "Basic Operation" section. (Note: During playing, you can shortly press the **MENU** button to enter folder navigation mode.)

Note: This player can only play AVI videos. For other formats, you need to use the converting tool included on the CD-ROM to convert them. For detail information about the converter, see AVI Converter Quick User Guide on the CD.

Viewing photos

- Press and hold the **MENU** button to display the main menu.
- Select "Photo" and press the **MENU** button to confirm.
- Press the **VOL+ /VOL-** button to select a folder or image, and press the **MENU** button to confirm or press the **PLAY/PAUSE** button to return.
- Select the photo that you want to display and press the **MENU** button to enlarge it to full screen. In the full screen mode, you can press the **PREVIOUS/NEXT** button to enlarge the previous or the next photos. Press the **PLAY/PAUSE** to exit or stop slide show, or press the **MENU** button to enter folder navigation mode.

Note: Depending on the encoding format and resolution, some images may not be displayed. Try to use an image viewer to convert them before viewing.

E-book Reader

- Reading E-book
- Press and hold the **MENU** button to display the main menu.
- Select "Text" and press the **MENU** button to confirm.
- Press the **VOL+ /VOL-** button to select a .txt file, and press the **MENU** button to open the selected file.
- Press the **VOL+ /VOL-** button to flip page.
Press the **PREVIOUS/NEXT** button to read line by line.
Press the **PLAY/PAUSE** button to switch between auto and manual page up/down (by setting the time interval in Settings/Book Slide Show/Text). If you want to page up or down manually, press the **PLAY/PAUSE** button again.
- Press the **MENU** button to stop reading and return to the text file list.

Using bookmark

- You can use the bookmark to mark the page for resuming reading later. For information about bookmark, see "Using bookmark" section.
- Go to the page that you want to mark.
 - Press and hold the **VOL+** button for a while until you see a "Save Bookmark" window for saving the bookmark.
 - Press the **VOL+ /VOL-** button to select a location for saving the bookmark, and press the **MENU** button to confirm. The bookmark is saved. It starts from the first line of current page.
 - To read the page that you marked, press and hold the **VOL-** button to show up the "Load Bookmark" window. Press **VOL+ /VOL-** button to select a bookmark and press the **MENU** button to confirm. You will be guided to that page.

Note: Some TXT file may not be read. This may because its format is not supported. Skip it or rename another file.

Explorer

● Browning all files

- To browse all files stored in the player,
 - (1) Press and hold the **MENU** button to display the main menu.
 - (2) Select "Explorer", and press the **MENU** button to enter the browser mode.
 - (3) Press **VOL+VOL+** button to select a file that you want to view, and press the **MENU** button to play or display it.

● Deleting file

- To delete a file,
 - (1) In the explorer mode, select the file that you want to delete.
 - (2) Shortly press the **NEXT** button.
 - (3) Use the **PREVIOUS/NEXT** button to select "YES" and press the **MENU** button to confirm.

Voice Recording

● Record

- Press and hold the **MENU** button to display the main menu.
- Select "Record", and press the **MENU** button to enter the recorder mode.
- Shortly press the **PLAY/PAUSE** button to start recording. During recording, you can press the **PLAY/PAUSE** button to pause/resume recording.
- Shortly press the **MENU** button to stop and save recording.

● Play recordings

- To play the recording,
 - (1) Press and hold the **MENU** button to display the main menu.
 - (2) Select "Explorer" and press the **MENU** button to confirm and enter folder navigation mode.
 - (3) Select the "VOICE" folder and press the **MENU** button to open it.
 - (4) Press the **VOL+VOL+** button to select a recording file and then press the **MENU** button to play it. For detail information about playing voice, refer to the "Basic Operation" section.

FM Radio (for EM871RB)

On the main menu, select "FM Tune" and press the **MENU** button to turn on the FM radio.

● Auto Search Station

To search stations automatically,

- (1) Shortly press the **MENU** key to show the submenu.
 - (2) Press the **PREVIOUS/NEXT** button to select "Auto" menu.
 - (3) Press the **MENU** button to confirm.
- Manually search stations
- (1) Shortly press the **MENU** key to show the submenu.
 - (2) Press the **PREVIOUS/NEXT** button to select "Manual" menu.
 - (3) Press the **MENU** button to confirm.
 - (4) Press the **PREVIOUS/NEXT** button to turn up or turn down frequency.

● Save station

To save a found station,

- (1) Shortly press the **MENU** key to show the submenu.
- (2) Press the **PREVIOUS/NEXT** button to select "Save" menu.
- (3) Press the **PREVIOUS/NEXT** button to select a channel number.
- (4) Press the **MENU** button to confirm.
- (5) Press the **PREVIOUS/NEXT** button to select "Yes" and press the **MENU** button to confirm.

● Listen to Station

To listen to saved station,

- (1) Shortly press the **MENU** key to show the submenu.
- (2) Press the **UP/DOWN** button to select "Preset" menu.
- (3) Press the **PREVIOUS/NEXT** button to select a preset station for listening.

● Delete station

In the PRESET mode, shortly press the **MENU** key to show the submenu.

- (2) Press the **PREVIOUS/NEXT** button to select "Delete" menu.
- (3) Press the **PREVIOUS/NEXT** button to select a station to delete.
- (4) Press the **PREVIOUS/NEXT** button to select "Yes" and press the **MENU** button to confirm.

● Record FM program

When you are listening to a station, you can shortly press the **PLAY/PAUSE** button to record your favorite programs. For detail information about recording, see "Recorder" section.

Playing game

The player provides a popular and funny game - Tetris World. To activate the game, on the main menu, select "Game" and press the **MENU** button to enter the game mode. Basic operation is as follows.

- Start game: Press the **PLAY/PAUSE** button
- Move the block left and right: Press **VOL-** and **VOL+** button
- Rotate the block: Press the **PREVIOUS** button
- Insert the block: Press the **MENU** button
- EXIT: Press and hold the **MENU** button

Customizing Settings

To customize the player settings:

- (1) On the main menu, select the "Settings" item and press the **MENU** button to enter the system setup mode.
- (2) Press the **VOL+VOL+** button to select setting item and press the **MENU** button to confirm or press the **Play/Pause** button to cancel/return.

Music	Repeat mode	Once (Play current track once and then stop.)
	Repeat (Repeat current track)	On (Repeat current track)
Folder	Folder (Play all audio files in the current folder and stop after playing)	On (Repeat all audio files in the current folder)
	Repeat Folder (Repeat all audio files in the current folder)	Normal (Play all audio files stored in the player and stop after playing all)
Repeat All	Repeat All (Repeat all audio files stored in the player)	On (Play the first 10 records of each audio file)
	Play mode	Order (Play audio files in order)
Shuffle	Shuffle (Play audio files randomly)	On (Play audio files randomly)
	Presets EQ	Normal, 3D, Rock, Pop, Classical, Bass, Jazz, User EQ

Music	User-defined EQ	(1) Press the PREVIOUS/NEXT to switch EQ column.
	EQ-defined equalizer	(2) Press the LPHOORN button to adjust levels.
	Repeat	(3) Repeat pressing the NEXT button until the cursor is on the YES button, and then press the MENU button to confirm. Or, select "Off" to quit.
	EQ	(4) Go to the Preset EQ menu, and select User EQ to enable the equalizer settings.
Radio	Steno Switch	On - Enable stereo effect Off - Disable stereo effect
	FM region	China, Europe, Japan, U.S.A.
Record	Record Quality	High Quality, General Quality
	Record Volume	+1 - +2 - +3 - +4 - +5
Auto slide show	TEXT (Text interval between the previous and the next page when the device is in auto page (off/on mode.) Photo (Interval between the previous and the next slide in auto slide show mode.)	
Display	Backlight	0 seconds, 10 seconds, 15 seconds, 20 seconds, 30 seconds, Always On
	Brightness (Set the brightness of the screen)	Normal
Backlight mode	Power Save (Turn off the screen when there is no activity MP3 file)	Normal
	Language - Select language to which the on-screen text is displayed	Auto - system information about the player
System	Upgrade - upgrade firmware	
	Power off	Set the continuous working time before the player is turned off automatically.
Default set	Restore system settings to default	

Troubleshooting

Problem	Possible Cause	Solution
The LCD displays nothing when the device is started.	Battery is too low.	Charge the battery.
No sound when playing an audio file.	The volume is too low. Bad volume file.	Adjust the volume. Delete or rename the file.
The player interface is not supported by PC's motherboard.	The USB interface is not supported by PC's motherboard.	Update or replace the PC's motherboard.
The displayed time is changing constantly.	The bit rate of the MP3 file is changing during playback.	Try to use fixed bit rate to compress the MP3 file.
The PC has error when you plug and unplug the player.	The player is disconnected from the PC's identity while transferring files.	Do not disconnect the player from the PC when transferring files.
Total memory displayed on the player is not in accordance with the marked amount.	Part of memory is used to store programs and display characters.	
Some of MP3 files cannot be played properly.	The MP3 file is compressed by a standard such as MPEG 1 Layer 1 or Layer 2 that the player does not support.	1. Delete the unsupported MP3 files. 2. Use MPEG 1 Layer 1 standard to compress the unsupported MP3 files.
The video cannot be played.	The file format is not supported. The video data is corrupted. The file format is not supported.	Make sure the video is AVI format. If not, use the provided converting tool to convert it. Skip or reload another file. Try to use an image editor to convert it.
The photo cannot be displayed.	The image resolution is beyond limitation of the device.	The device supports a maximum resolution of 3200 X 2816. Make sure resolution of the image does not exceed this limitation.
The TXT file cannot be read.	The file format is not supported.	Skip or reload another file.

Technical Specifications

Item	Specification
Hardware	IBM PC Compatible PC, Notebook with USB interface
Operating System	Windows98/SE, Windows Me, Windows2000/XP
Capacity	128MB or above
Battery Type	Rechargeable Lithium Battery
Battery Life	Approx. 10 hours (audio playback, 8 hours for audio playing)
LCD Display	2.4 inch TFT screen
Language Power	Spanish/Other
Voice Format	AVI (AVI2)
Audio Format	MP3, WMA, OGGM
Photo Format	JPEG, BMP
Image Resolution	3200 X 2816 (Max.)
Record Format	WAV/MP3, 64kbps/80kHz, Channel: 2ch/60kHz
Bit Rate	MP3: 8, 16kbps, WMA: 10, 32kbps
Input	-input
USB I/F	USB 2.0
Operational Temperature	0°C - +45°C
Storage Temperature	-20°C - +55°C
Operational Relative Humidity	20% - 90% (40°C)
Storage Relative Humidity	20% - 95% (40°C)

Packaging Content

Main Unit, Stereo earphones, USB cable, User Manual, Application CD