

• a l c o r



*Fun*

*User Manual*



**PRODUCT FEATURES:**

- 16-Bit Digital Micro-processor Platform
- Built in 100 games
- 2.5" LCD TFT Screen
- Portable game console
- AV output to connect the game console to TV (cable not included)
- Input for AC power adaptor (power adaptor not included)
- Supports battery operations (batteries not included)

**CONTAINS:**

- Handheld Game Console
- Instruction Manual

**BUTTON SUMMARY:**

Below a description list of all buttons on the pocket game console. Detailed game information will be advised further in this instruction manual.


- D-Pad----- Direction key
- Reset button ----- Restart into main Menu.
- A Button----- Confirm key
- B Button----- Special functional key
- Start Button ----- Pause function (select "Resume" or "Quit" from the game)
- Select button ----- Functional key (only effective in some games)
- AV Cable Port ----- Connect with TV (through optional available AV cable)
- Earphone Port ----- Connect with the earphone (earphones optional)
- Volume Button ----- Adjust the volume

## BATTERY INSTALLATION

Please remove the screw of the battery door cover at the back of the game console. Open the battery door and insert 3 pieces “AAA” batteries (not included) into the unit. Please take care to put the batteries in right way by using + and – on battery and main unit.

## IMPORTANT : BATTERY INFORMATION

Please retain this information for future reference .Batteries should be installed by an adult person.

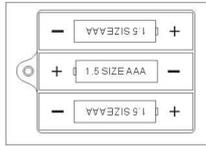


### CAUTION:

1. Always follow the instructions very carefully. Use only new batteries according specifications and be sure to insert them correctly by matching the + and – polarity markings.
2. Never use rechargeable batteries with un-rechargeable batteries .
3. Do not mix old batteries and new batteries.
4. Remove exhausted or dead batteries from the console.
5. Remove batteries if he console has not being used for a long time.
6. Do not make short circuit on the supply terminals.
7. Should the game console get any problems caused by local electrical interference, please move it away from other electrical equipment. In case the problem still not solved, please remove and install batteries again to reset the unit.
8. Please keep the game console away from small children below 5 years old.
9. Do not dispose of put batteries in open fire, batteries may explode or leaking fluid which harms health and environment.

## CONNECTION TO TELEVISION:

The game console can be connected to TV by using a special AV cable. The AV cable is not included and can be purchased at additional cost at your dealer. In case you will buy this AV cable please find below the instruction and drawing to connect the console to TV.

Put the small connector in the game console and connect the red and yellow connector to the TV/DVD player. Please consult the instruction manual from TV/DVD player, which input is needed on the TV/DVD player.

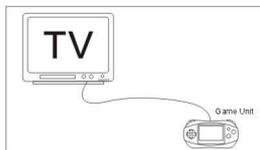

Furthermore, please put the connectors of the cable fully into the sockets. In case there is no external AV input on the TV available, please connect the AV cable to your DVD player and refer to the instruction manual from the TV/DVD player for further installation instruction.

## MAINTENANCE AND USE OF THE CONSOLE:

Handle the game console with care and store in a clean and dust free area. Keep the game console away from moisture, extreme temperatures or any environment which can harm the game console. Do not disassemble the game console yourselves and return to your dealer in case there is any problem caused.

## **LIST OF GAMES:**

Name

TENNIS

BASEBALL

GOLF

TABLE TENNIS

BASKETBALL

BOWLING

DARTS

BOXING

Run

Fencing

Swim

Qcar

SHUDU

MOVE BOX

100 FLOOR

BENTHAL JEWEL

SUPER MEMORY

LINKING PET

SUB WARFARE

COLOR STONE

BLACKJACK

RALLY

PAIR MATCH

FREECELL

MINE

UP STAIRS

GT RACING

JUMPING MARY

GOBANG

FIND FAULT

Gather Eggs

Brick Blaster

Elvish Boy

Escape The Trap

Castle Smasher

Transmover

Jumping Boy

Puzzle Connection

" Balloon Boy"

Build Road

Rescue Pets

Motoboat

Crazy Fighter

Aliens Hunter

Assault

DJ POP

Freedom

Gem PhalanX

Head Block

Jet girl  
Leaf Life  
Mice Way Home  
Mole Hunting  
Pirate Century  
Star Restaurant  
Stone Age  
Doudou  
Zero Hunt  
Cake Party  
Cartoon Puzzle  
Gold Miner  
Good Fisherman  
Jumping Eggs  
Motocross  
Open Gold Box  
Seize Jewelry  
Super Brick  
X Training  
Super Porter  
Gas Station  
Cups changing  
RobotWar  
30 Degree  
Diamond Forest  
WestCowboy  
PaoPao  
Bumper balls  
HappyNight  
Sea Fight  
Big Shot Checker  
HighWay Racing  
Track Racing  
Pocket Change  
Slot Machine  
Brain Challenge  
Mini Soccer  
Frogger  
Table Football  
Archery  
Zuma  
Climbing Expert  
Shape Switcher  
CrazyPush  
Super Pizza  
Panda Labyrinth  
Beach Volleyball  
CAKE STORE  
Dodgeball  
"Greedy Girl"  
Forest Adventure