

4alcor



STYLE

User Manual

Precautions

- Do not subject the device to severe impact or drop it from high position.
- Do not use the device in extreme hot or cold, dusty or damp field. Do not expose it to direct sunshine.
- Avoid using the device in strong magnetic field.
- Keep the device away from water or other liquids. In the event that water or other liquids enter the device, power off the product immediately, and clean the device with soft cloth.
- Do not use chemical solution to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- We are not responsible for the damages or lost data caused by malfunction, misusing, repairing the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product, or it will be out of guarantee.
- To prevent overheating, never block vents on the back of the digital photo frame.
- The screen is made of glass and may be easily scratched or broken. Wipe the screen with soft, non-abrasive cloth.
- Do not apply cleaning liquid directly to the LCD screen. Moisten the cleaning cloth with the cleansing solution, and then wipe the screen with the damp cloth.
- This manual is subject to change without prior notification. Functions or display of the actual product may be different from what is described in this manual. Please refer to the actual product.

1 Key Features

- 8.0-inch TFT display with high-resolution
- Display JPEG image files
- Plays MP3 music files
- Plays AVI, MP4 video files
- Supports SD, MMC, MS
- Supports USB flash disk
- Automatic slide show
- Remote control function

2 Package Content

- 8" Digital Photo Frame
- Remote control
- AC Adaptor
- User manual

3 Specifications

 
Display	8.0-inch TFT screen, 800 x 600 pixel
USB Interface	USB 2.0 Host(High Speed)
Photo Format	JPEG(base line)
Video Format	MPEG 1 and MPEG 2 – layer I, II, III, (*.mpg, *.mpeg, *.dat) MPEG4 – MP3 audio (*.avi) M-JPEG –MP3 audio (*.avi)
Audio Format	MP3
Output Port	2 Speakers
Memory Card Type	SD/MMC/MS
Bit Rate	32-320kbps(MP3)
Memory Card Capacity	SD/MS: 128MB~8GB; MMC: 256MB ~ 2GB
USB Flash Disk	128MB ~ 8GB
Power Supply	AC Adapter, Input AC 100-240V, Output DC 5V/2A
Storage Temp*	-20°C ~ +65°C
Ambient Temp*	0°C ~ +55°C
Operation Relative Humidity*	20% ~ 90% (40°C)
Storage Relative Humidity*	20% ~ 93% (40°C)

Remark: Specifications mentioned above are subject to change without prior notification and just for your reference.

4 Buttons & Ports


Front View

- ① **LCD Display**
- ② **Remote control sensor**
- ③ **Power Switch** – Press and hold to turn on the device; briefly press to turn off the device

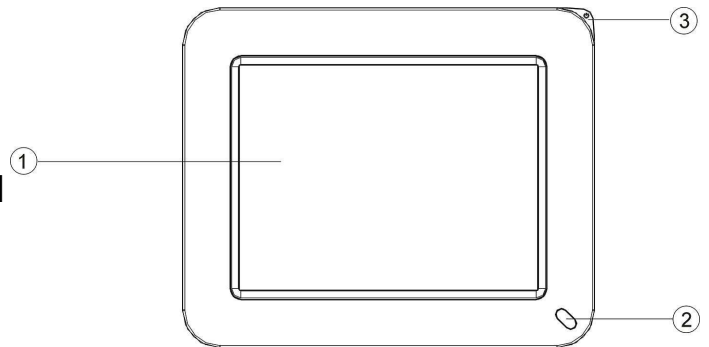


Rear View

 - ▮ **ESC** - return
- ▮ **Menu** - confirm selection
- ▮ **Up** - select up
- ▮ **Down** - select down
- ▮ **Left** - select left
- ▮ **Right** - select right
- ▮ **Built-in Speaker**
- ▮ **USB port** - for inserting a USB flash drive
- ▮ **Stand Groove** - holding the stand
- ▮ **Memory card slot** - for inserting SD/MMC memory card
- ▮ **DC-IN Port** - connect to power supply through the AC adaptor

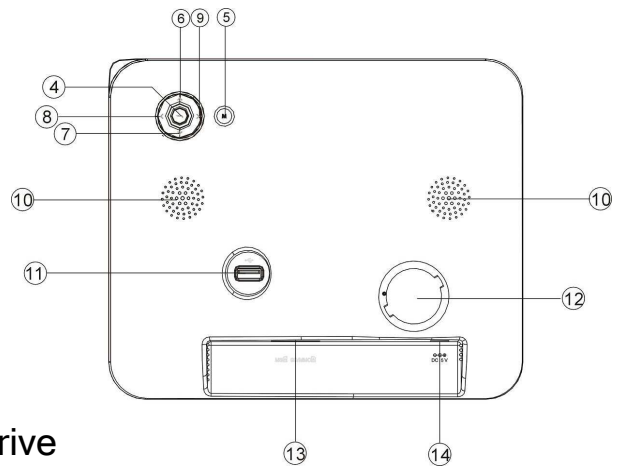


Side View

 - (15) **Stand** - support the device on any flat surface

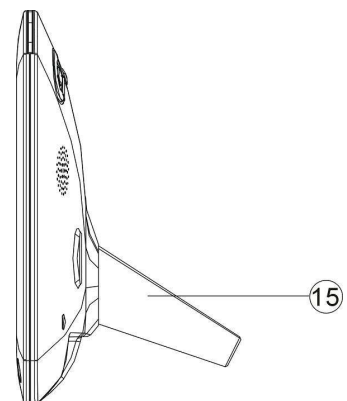

5 Remote Control

 
• Function of Buttons

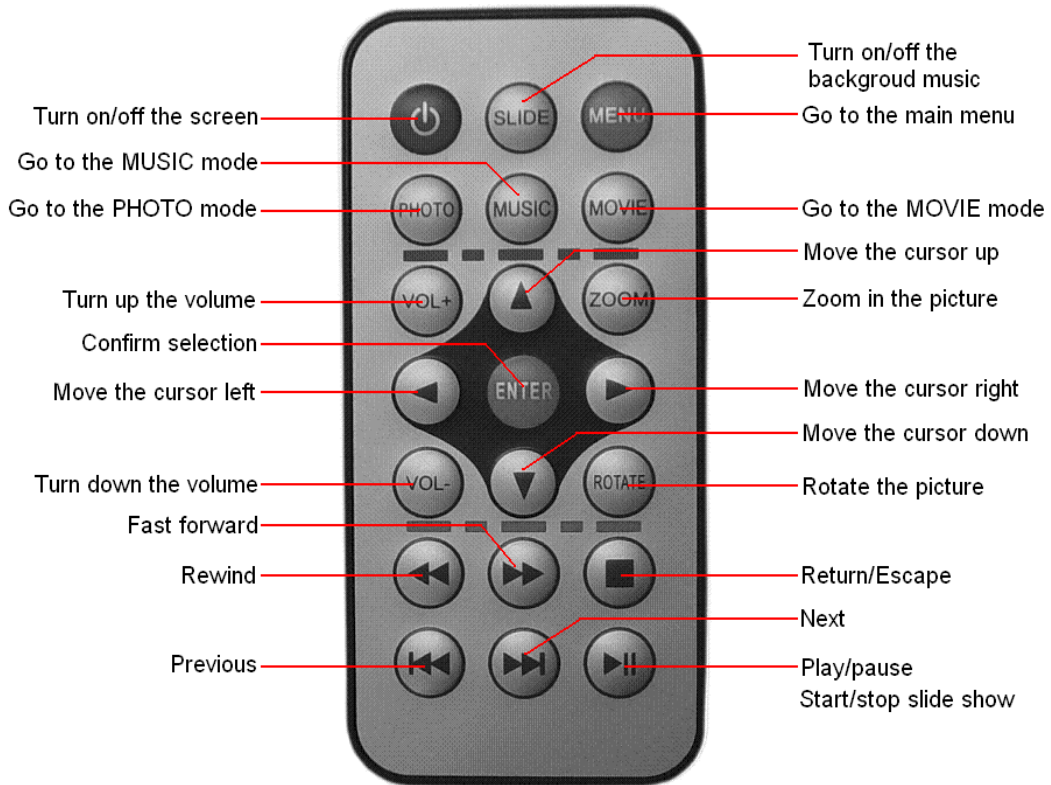

Note: Before you use the remote control, please remove all plastic strips.

• Install or replace the battery

 - (1) Pull out the insulating tape under the battery tray when you use the remote control for the first time.
- (2) Push the battery cover pin to the direction as the arrow show and pull out the battery tray.

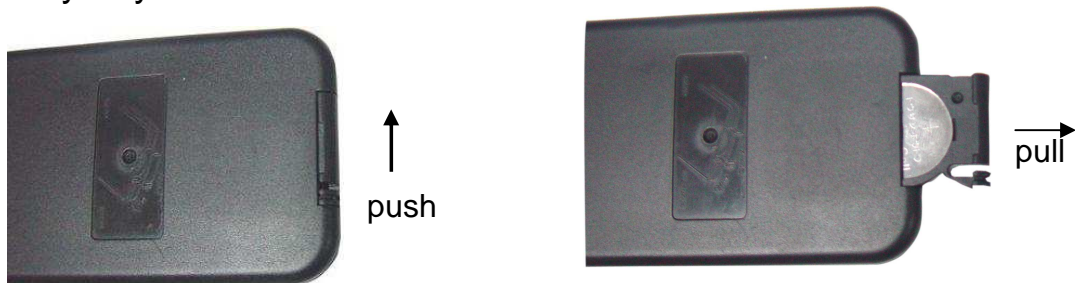


- (3) Place a 3V lithium-Ion battery with the model of CR2025 into the tray.
- (4) Push in the battery tray until it clicks.

6 Installation

- **Install the Stand**


Attach the stand to the groove on the back, and screw it clockwise with pressure until it clicks. Rotate the handle to adjust its position for any angle view.

 To uninstall the stand, screw the stand anti-clockwise with pressure to take the stand off the back.

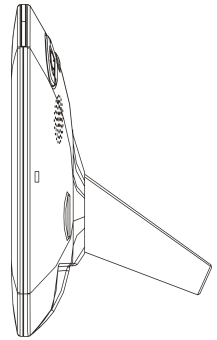


- **Connect to a wall outlet via the AC adaptor**

 The digital photo frame is powered by 5V DC IN input. Connect the AC adaptor to the DC IN port on the back and the electronic wall socket.

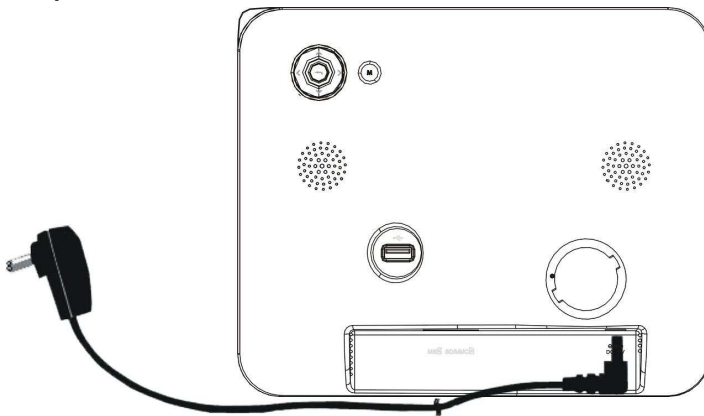


- **Inserting a memory card/USB flash disk**

 
The device has no built-in memory for storing pictures. It displays pictures directly from a memory card or USB flash drive. Before using the frame, make sure to insert a memory card into the card slot or a USB flash drive into the USB port.

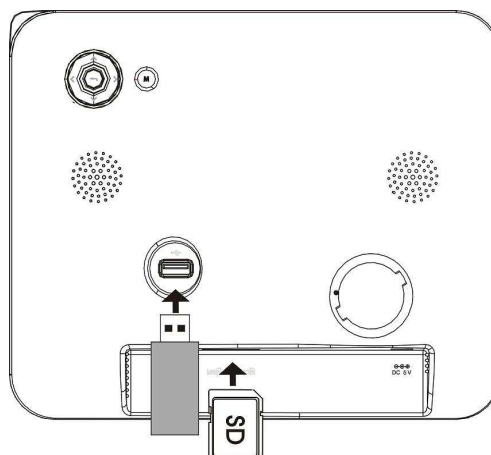

7 Turn on / off

 
After connecting the device to an electronic outlet, press and hold the  button on the device to turn on it.



To turn off the device, briefly press the  button.

Note: The  button on the remote control is not used to turn on or turn off the device. It is used to enter the sleep mode for saving power when you do not want to use the device momentarily.

8 Main Menu

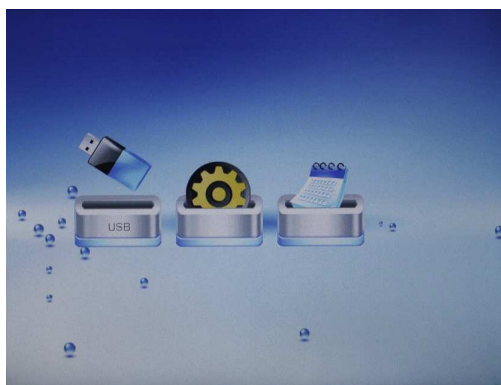On the remote control, press the **MENU** button to display the main menu.



Press   to select a menu item. Press the “**ENTER**” button to confirm your selection.

Menus for you:

USB – Play the USB flash disk

 
SD/MMC – Play the SD/MMC card

SETUP – Set up the system

Calendar – View the calendar

9 Play Videos


Enter the video mode by either of selecting “**MOVIE**” on the main menu or pressing the **MOVIE** button on the remote control.

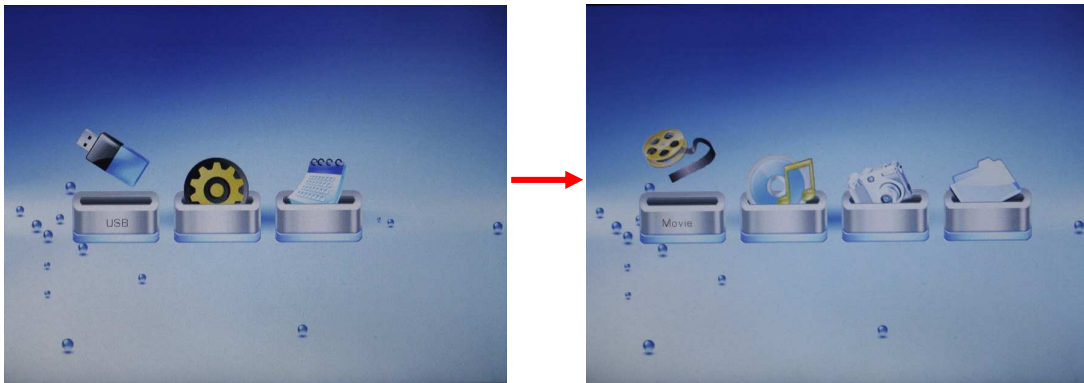

- **Select a video**

Press the ▲ ▼ button to select a video.

 Press the **ENTER** button to confirm selection and start playing the selected video.

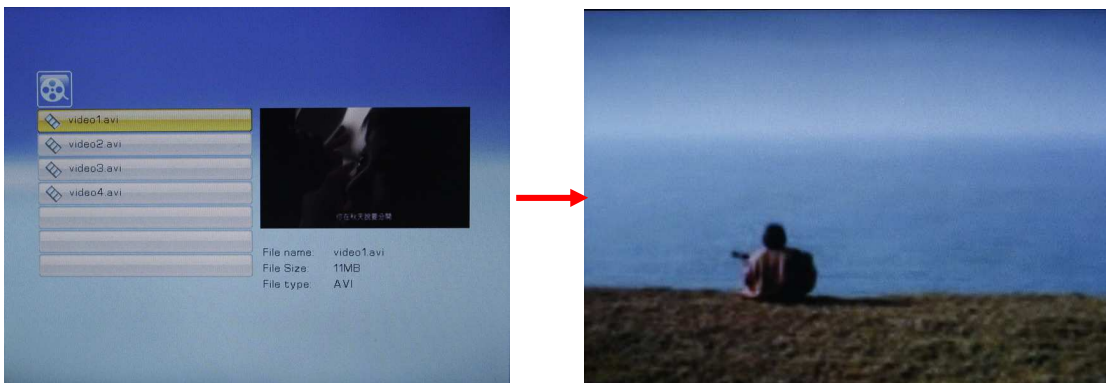

- **Play/Pause/Stop**

Press the ▶|| button to play or pause.

Press the ■ button to stop playing and return.

- **Previous/Next Video**

At any time you can press the ◀▶ button to play the previous or the next video.

- **Fast Forward/Rewind**

Press the ◀▶ button to rewind or fast forward the video. Press ▶|| to stop rewinding or forwarding.

 
- **Adjust the volume**

Press the **VOL+ / VOL-** to increase or decrease the volume.

Note: *The device does not guarantee the support to all video files in various encoding formats and resolutions. Please make sure the encoding format and resolution of the video file is compliable with this device.*

10 Play Music


Enter the MUSIC mode by either of selecting “MUSIC” on the main menu or pressing the **MUSIC** button on the remote control.

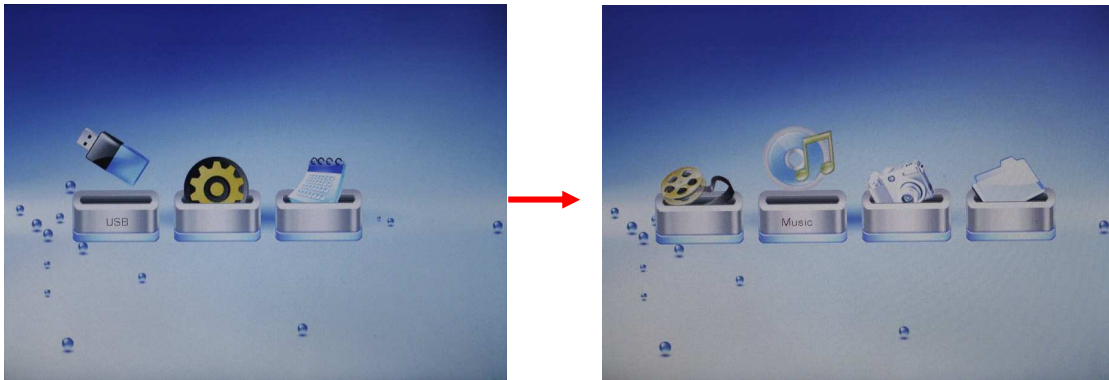

Select a track

Press the button to select a track.

 Press the **ENTER** button to confirm selection and start playing the selected track.

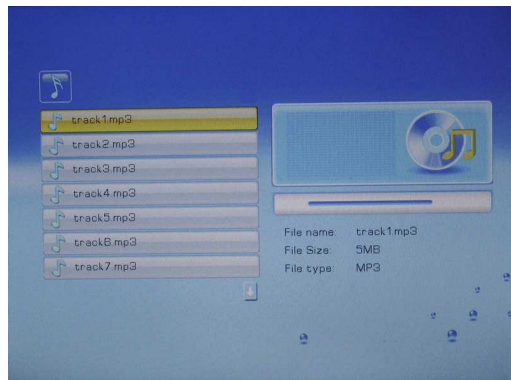

Play/Pause/Stop

Press the button to play or pause.

Press the button to stop playing and return.

Previous/Next track

At any time you can press the / button to play the previous or the next track.

Fast Rewind/Forward


Press the button to rewind or fast forward the track. Press to stop rewinding or forwarding.

Adjust the volume

Press the VOL+ / VOL- to increase or decrease the volume.

11 Display Photos

Enter the PHOTO mode by either of selecting “PHOTO” on the main menu or pressing the PHOTO button on the remote control.

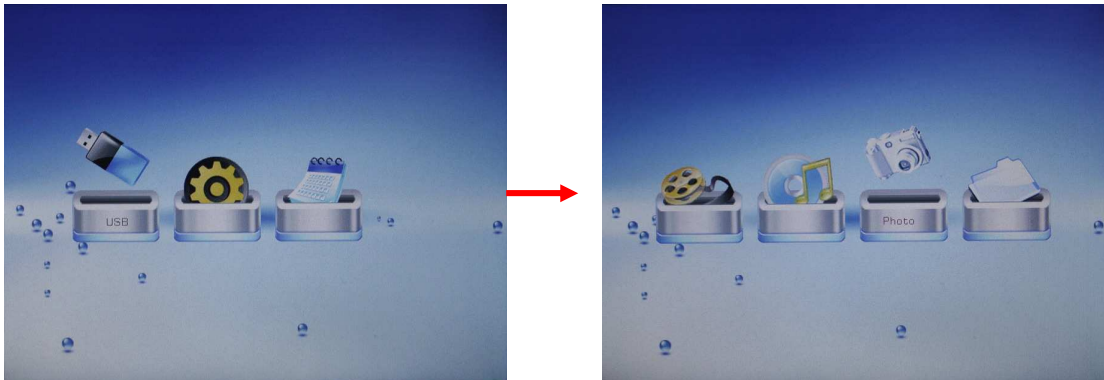 

Thumbnail View



Photos are displayed in thumbnail view when you enter the PHOTO mode.




Press the     button to select a picture.

Press the “ENTER” button to confirm your selection and enlarge the photo to full screen.

Previous/next

When you are viewing a photo, you can press   to display the previous or the next photo.

Slide Show

In the full screen mode, press the  button to display photos in automatic slide show mode.

To pause or resume the slide show, press the  button.

To stop the slide show, press the  button to stop and return.


Rotate the picture

In the full screen mode, press the **ROTATE** button to rotate the picture clockwise.

Zoom in

Repeatedly press the **ZOOM** button to zoom in the picture. When the photo is zoomed in, you can press     to move the photo, or press the  button to restore the photo to original size.

Background Music

 
To display pictures with background music, press the **SLIDE** button on the remote control. Music on the selected memory (card or USB flash disk) will be played during slide show or picture viewing. You can press the VOL-/VOL+ button to adjust the volume of the background music, or press the  button to pause or resume the slide show.

To exit from the slide show mode with background music, press the  button.


12 File Navigation


To navigate through all files,

Select "File" on the main menu, and then press the ENTER to enter the file navigation mode.

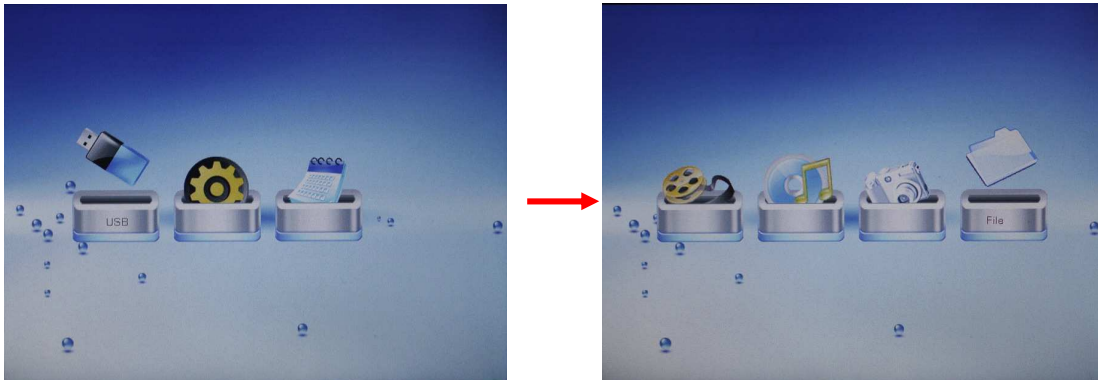

Press the   button to select a file.

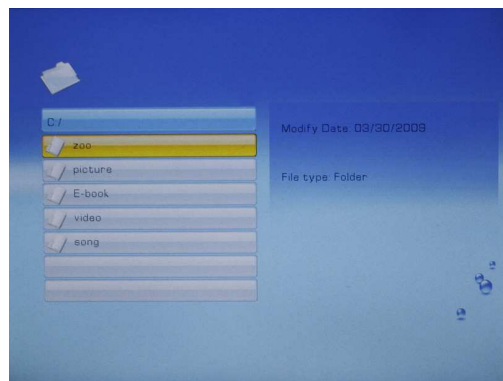 

Press the **ENTER** button to confirm selection, or press the  button to return or close the current folder.

13 System Settings

On the main menu, select “SETUP” to enter the system setting mode.



Press the ◀ ▶ button to select a setting item.

Press the ▲ ▼ button to select an option.

Press the **ENTER** button to confirm setting.

Press the ■ button to exit and return.


Language	set the language of the on-screen texts
Slideshow Time	Set time interval between slides.
Transition Effect	Set the transition effect of slide show
Music Repeat Mode	Set repeat mode of music playing. Repeat One – Repeat the current track. Repeat All – Repeat all tracks stored in the memory card/USB flash disk Repeat Off – Play all tracks sequentially without repeat.
Movie Repeat Mode	Set repeat mode of video playing. Repeat One – Repeat the current video. Repeat All – Repeat all videos stored in the memory card/USB flash disk Repeat Off – Play all videos sequentially without repeat.
Display Mode	Set display mode of the screen
Tft Brightness	Set brightness of the TFT screen
Tft Contrast	Set contrast of the TFT screen
Tft Saturation	Set saturation of the TFT screen
Time	Set the date and time. (1) Press the ◀ ▶ button to select Year, Month, Day and Time. (2) Press the ▲ ▼ button to set the Year, Month, Day or Time.

	(3) Press the ENTER button to confirm.
Alarm	Set the alarm time. (1) Press the ◀ ▶ button to select Hour, Minute, Ring, Frequency (once or everyday) or Off. (2) Press the ▲ ▼ button to select option. (3) Press the ENTER button to confirm.
Default	Restore the system settings to defaults

14 Calendar

The Digital Photo Frame can be used as a tabletop calendar and an alarm clock.

 To enter the calendar view mode, on the main menu, select “Calendar” and then press the ENTER to display the calendar. You should see the current date and time, alarm time and automatic slide show in the calendar.

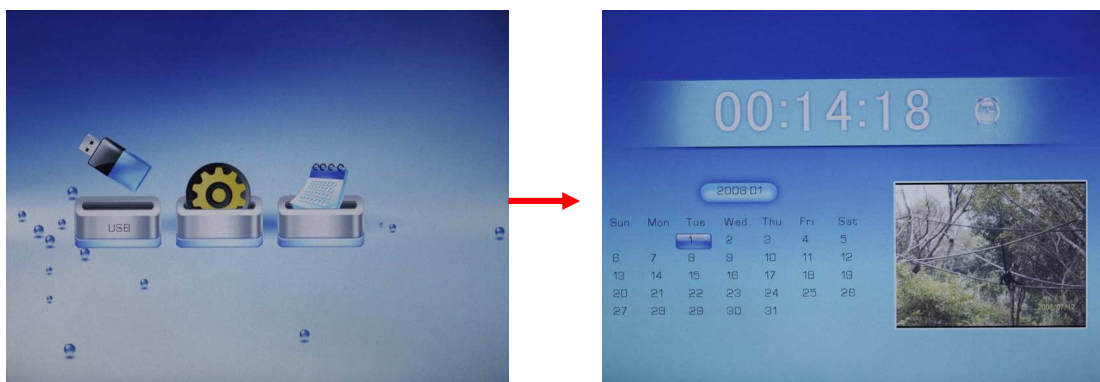

Press the ◀ ▶ button to view the previous or next month. Press the ▲ ▼ button to view the previous or next year.

15 Troubleshooting

The digital picture frame cannot be powered on.	Make sure that the AC adapter is connected securely to the frame and the power source.
No sound when playing music.	The volume is too low
Remote control does not work	Ensure that a working battery is inserted
The images or video is not displayed in the file list.	<ul style="list-style-type: none"> · Make sure the image or video file is in a supported formats. · Make sure that at least one image or video file exists on the media card.

The image or video is distorted or blurred.	· Resolution of the video or image is too low. Try playing a file with a higher resolution. Resolution of 800 X 600 pixels is recommended.
Video playback is intermittent.	Speed of the media device may be too slow. Try a device with high speed.
Responds of the unit is too slow.	There are too many files in the memory device.